


If a Fuse Blows

Circuit Fuse Access:

- To access the circuit fuses, remove the right side cover (page 77).
- Remove the fuse box cover (6).


RIGHT SIDE

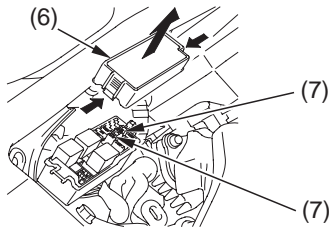

(6) fuse box cover (7) spare fuses

- To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown (8), replace it with a spare fuse (7) of the same rating.

CIRCUIT FUSE

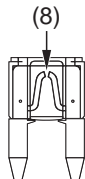

(8) blown fuse

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

- Install the fuse box cover.
- Install the right side cover.