


## Spark Plug ► Checking Spark Plug

8. Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling.
  - If the erosion or deposit is heavy, replace the plug.
  - Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.

9. Check the spark plug gap using a wire-type feeler gauge.
  - If adjustment is necessary, bend the side electrode carefully.

### The gap should be:

0.031 to 0.035 in (0.80 to 0.90 mm)

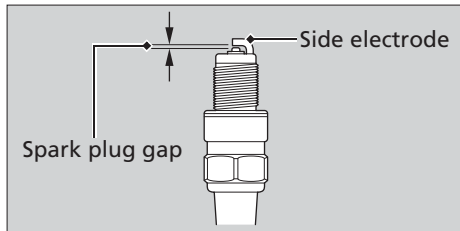

10. Make sure the plug washer is in good condition.
11. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.