

## Tire Puncture ► Removing Wheels

8. Cover the right swingarm with protective tape or an equivalent.
9. Remove the rear brake bracket bolt.
10. Slide the rear axle shaft to the left side until the rear wheel can be removed.
  - Do not pull the rear axle shaft out completely.
11. Remove the rear brake bracket.
12. Move the wheel to the right to separate it from the final drive gear case.

