


## Spark Plug ► Checking Spark Plug

2. Remove the caps, bolts and washers.
3. Carefully pull the front over head covers on both sides out until the prongs are clear of the engine grommets.
4. Remove the front over head center cover.

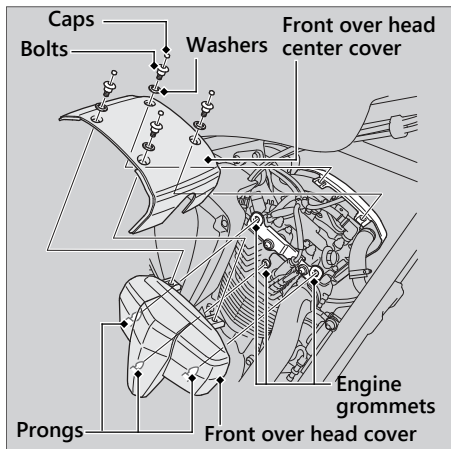

5. Disconnect the spark plug caps from the spark plugs.
6. Clean any dirt from around the spark plug bases.
7. Remove the spark plugs using a suitable spark plug wrench.

