


- Inspect the electrodes and center porcelain for deposits, erosion or carbon fouling.
 - If the erosion or deposit is heavy, replace the plug.
 - Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.

- Check the spark plug gap using a wire-type feeler gauge.
 - If adjustment is necessary, bend the side electrode carefully.

The gap should be:

0.03 - 0.04 in (0.8 - 0.9 mm)

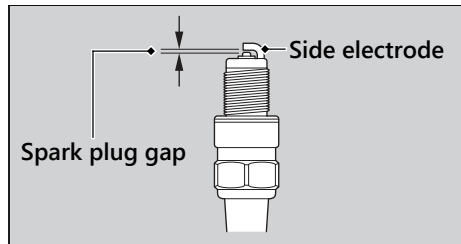

- Make sure the plug washer is in good condition.
- Install the spark plugs. With the plug washers attached, thread the spark plugs in by hand to prevent cross-threading.