

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 91
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 92
<b>Warning Indicators On or Flashing</b> .....	P. 93
Low Oil Pressure Indicator .....	P. 93
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 93
ABS (Anti-lock Brake System) Indicator .....	P. 94
<b>Tire Puncture</b> .....	P. 95
<b>Electrical Trouble</b> .....	P. 104
Battery Goes Dead.....	P. 104
Burned-out Light Bulb .....	P. 104
Blown Fuse.....	P. 108