


Engine Oil ► Changing Engine Oil & Filter

- Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.
 - Discard the oil and oil filter at an approved recycling center.

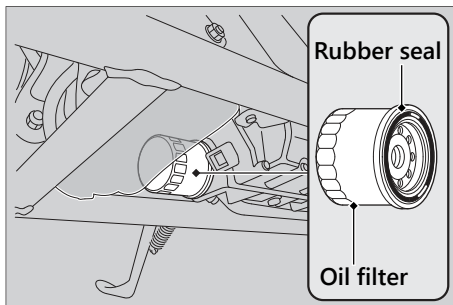

- Apply a thin coat of engine oil to the rubber seal of a new oil filter.
- Install the new oil filter and tighten.

Torque: 19 lbf-ft (26 N·m, 2.7 kgf·m)

- Install new sealing washers onto the drain bolts. Tighten the drain bolts.

Torque: 22 lbf-ft (30 N·m, 3.1 kgf·m)

- Fill the crankcase with the recommended oil (► P. 52, ► P. 134) and install the oil fill cap/dipstick.

Required oil

When changing oil & engine oil filter:

3.9 US qt (3.7 L)

When changing oil only:

3.7 US qt (3.5 L)

- Check the oil level. ► P. 69
- Check that there are no oil leaks.