

## Gauges, Indicators & Displays

---

7	low oil pressure indicator (red)	Lights when engine oil pressure is low enough to cause engine damage. If the low oil pressure indicator lights during operation, pull safely to the side of the road. See page 172 for instructions and cautions. <i>Lamp Check.</i>
8	neutral indicator (green)	Lights when the transmission is in neutral.
9	odometer/tripmeter/digital clock select and reset button	Resets the tripmeter to zero (0) (page 21 ). Selects the odometer, tripmeter 1, tripmeter 2 and digital clock (page 20 ). Also used to set the digital clock (pages 22 – 24 ).
10	fuel reserve indicator (orange)	When this indicator comes on while riding, fuel reserved in the tank is about: <b>0.87 US gal (3.3 ℓ)</b> Should also light for a few seconds and then go off when the ignition switch is turned ON. <i>Lamp Check.</i>