


# Gauges, Indicators & Displays

## Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Show the digital clock (1).
3. Push and hold the odometer/tripmeter/digital clock select and reset button (2) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.

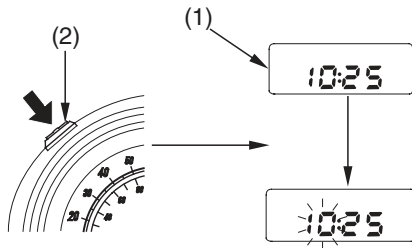

- (1) digital clock  
(2) odometer/tripmeter/digital clock select and reset button