

Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)								Refer to page	
				× 1,000 mi	0.6	4	8	12	16	20	24		
				× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
EMISSIONS-RELATED ITEMS	*	FUEL LINE					I		I		I	—	
	*	THROTTLE OPERATION					I		I		I	101	
		AIR CLEANER	2					R			R	95	
		CRANKCASE BREATHER	3			C	C	C	C	C	C	97	
		SPARK PLUGS				I	R	I	R	I	R	107	
	*	VALVE CLEARANCE				I		I		I		I	—
		ENGINE OIL				INITIAL = 600 mi (1,000 km) or 1 month: R REGULAR = EVERY 8,000 mi (12,800 km) or 12 months: R						81	
		ENGINE OIL FILTER				R		R		R		R	86
		RADIATOR COOLANT	4					I		I		R	91
	*	COOLING SYSTEM						I		I		I	—
	*	SECONDARY AIR SUPPLY SYSTEM						I		I		I	—
*	EVAPORATIVE EMISSION CONTROL SYSTEM	5						I			I	—	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 206).