

# Side Cover Removal

Refer to *Safety Precautions* on page 60 .

The right side cover must be removed to service the fuses.

The left side cover must be removed to access the tool kit.

The right and left side covers can be removed in the same manner.


## Removal

1. Grasp the side cover (1).
2. Pull out.


## Installation

1. Position the cover so the prongs on the inside of the cover are line up above their securing slots.
2. Push the cover in place.

### RIGHT SIDE

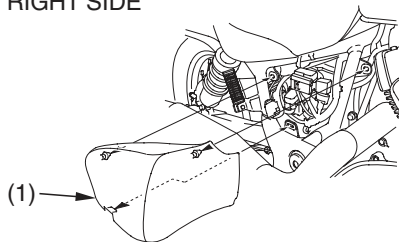

### LEFT SIDE

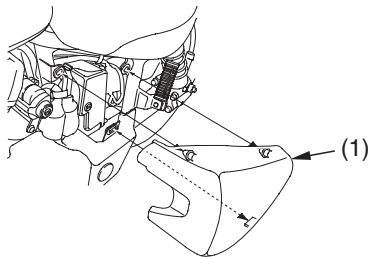

(1) side cover