Engine Oil & Filter

- 13. Start the engine and let it idle for 3-5 minutes.
- 14. Stop the engine and wait 2-3 minutes.
- 15. Hold the motorcycle upright and check that the oil level is at the upper level mark on the oil filler cap/dipstick (page 85).
- 16. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.