 
Oil Recommendation

type	hypoid gear oil
viscosity	SAE 80
(weight)	

Checking & Adding Oil

Refer to Safety Precautions on page 60.

LEFT REAR



(1) oil filler cap(2) oil filler hole

- 1. Place the motorcycle on its side stand on a firm, level surface.
- 2. Remove the oil filler cap (1).
- 3. Check the oil level. It should be flush with the lower edge of the oil filler hole (2).
- 4. If the level is low, check for leaks. Add the recommended oil through the oil filler hole until it reaches the lower edge of the opening.
- 5. Install the oil filler cap and tighten to the specified torque:
 9 lbf-ft (12 N·m , 1.2 kgf·m)

98 Servicing Your Honda