


Brakes

Adjustment

1. Adjust by turning the rear brake adjusting nut (4) a half-turn at a time. Make sure the cut-out on the adjusting nut is seated on the brake arm pin (5).
2. Apply the brake, release it, and then spin the wheel and check that it rotates freely. Repeat this procedure several times.
3. Check the freeplay. If you can't adjust the freeplay properly, see your Honda dealer.

RIGHT REAR

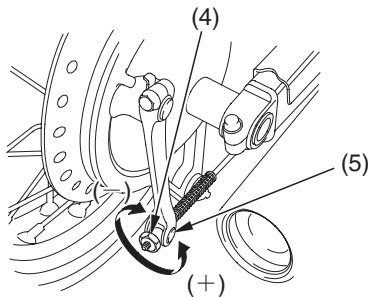

- (4) rear brake adjusting nut
- (5) brake arm pin
- (+) increase freeplay
- (-) decrease freeplay