


If a Fuse Blows

Main Fuse Access:

2. To access the main fuse, remove the right side cover (page 76).
3. Pull out the starter magnetic switch (1) and disconnect the wire connector (2) of the starter magnetic switch.
4. Pull the main fuse (3) out. If it is blown (5) (page 176), install the spare main fuse (4).
5. Reconnect the wire connector and install the starter magnetic switch.
6. Install the right side cover.

RIGHT SIDE

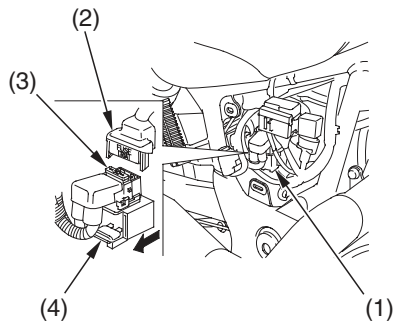

- (1) starter magnetic switch
- (2) wire connector
- (3) main fuse
- (4) spare main fuse