



 **Fuel reserve indicator**

Comes on briefly when the ignition switch is turned to the ON position.

When this indicator comes on, remaining fuel approximately 0.87 US gal (3.3 L)

 **Turn signal indicator**

 **High beam indicator**

 **Neutral indicator**

Comes on when the transmission is in Neutral.