

Items		Frequency	Odometer Reading*1							Refer to page	
			× 1,000 mi	0.6	4	8	12	16	20		24
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-Related Items	Fuel Line	🔧				I		I		I	–
	Throttle Operation	🔧				I		I		I	76
	Air Cleaner*2						R			R	50, 60
	Crankcase Breather*3				C	C	C	C	C	C	77
	Spark Plug				I	R	I	R	I	R	54
	Valve Clearance	🔧		I		I		I		I	–
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							58	
	Engine Oil Filter			R		R		R		R	58
	Engine Idle Speed	🔧		I	I	I	I	I	I	I	–
	Radiator Coolant*4					I		I		R	61
	Cooling System	🔧				I		I		I	–
	Secondary Air Supply System	🔧				I		I		I	–
	Evaporative Emission Control System*5	🔧					I			I	–

**Maintenance Level**

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (📖 P. 116).
- 🔧 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

**Maintenance Legend**

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- C : Clean