

2. Securely reinstall the reserve tank cap.

### **⚠ WARNING**

Removing the radiator cap while the engine is hot can cause the coolant to spray out, potentially scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

## **Changing Coolant**

---

Have your dealer change the coolant unless you have the proper tools and are mechanically qualified.