

### Starter Motor Operates But Engine Does Not Start

---


Check the following items:

- Check the correct engine starting sequence. ➔ P. 25
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➔ P. 25
- Make sure engine stop switch is in the  (Run) position. ➔ P. 22
- Check for a blown fuse. ➔ P. 97
- Check for a loose battery connection (➔ P. 51) or battery terminal corrosion (➔ P. 41).
- Check the condition of the battery.
  - ➔ P. 93

If the problem continues, have your vehicle inspected by your dealer.