## Tire Puncture ► Removing Wheels

## **Muffler Installation**

Before installing the muffler, replace the muffler gasket with a new gasket.

1. Tighten the nuts and bolts.

## Exhaust pipe joint nut:

**Torque:** 18 lbf·ft (25 N·m, 2.5 kgf·m)

Muffler bracket nut:

**Torque:** 32 lbf·ft (44 N·m, 4.5 kgf·m)

**2.** Reinstall the right footpeg. Tighten the nut and bolts.

## Footpeg bolt A, B and nut:

**Torque:** 29 lbf·ft (39 N·m, 4.0 kgf·m)

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.