










		Frequency	Odometer Reading*1							Refer to page	
			× 1,000 mi × 1,000 km	0.6 1.0	4 6.4	8 12.8	12 19.2	16 25.6	20 32.0		24 38.4
Emission-related Items	Fuel Line					I		I		I	-
	Throttle Operation					I		I		I	74
	Air Cleaner*2						R			R	72
	Crankcase Breather*3				C	C	C	C	C	C	73
	Spark Plug				I	R	I	R	I	R	52
	Valve Clearance			I		I		I		I	-
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							54	
	Engine Oil Filter			R		R		R		R	56
	Engine Idle Speed			I	I	I	I	I	I	I	-
	Radiator Coolant*4					I		I		R	58
	Cooling System					I		I		I	-
	Secondary Air Supply System					I		I		I	-
Evaporative Emission Control System*5						I			I	-	

Maintenance Level

 : Intermediate. We recommend service by your Honda dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 118).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

C : Clean

R : Replace