


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 42

Fuse Box Fuses (VT750C2/C2F/C2B)

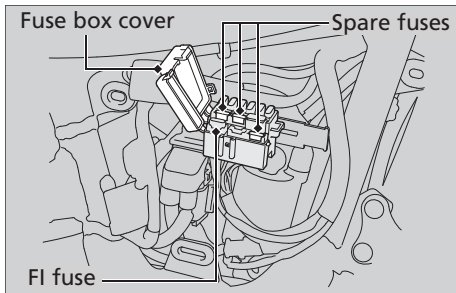

1. Remove the right side cover. ► P. 50
2. Open the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box cover.
5. Reinstall the right side cover.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.