


Digital Clock

Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Select the digital clock mode.
3. Push and hold the select/reset button (1) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.
4. To set the hour, push the select/reset button until the desired hour is displayed.

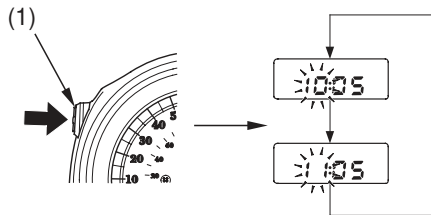

(1) select/reset button

(cont'd)