

# Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)							Refer to page	
				× 1,000 mi	0.6	4	8	12	16	20		24
				× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	
NON-EMISSION-RELATED ITEMS		FINAL DRIVE OIL									R	97
		BRAKE FLUID	4					R			R	113
		BRAKE SHOE/PAD WEAR (VT750C)										116, 120
		BRAKE PAD WEAR (VT750C ABS)										116
		BRAKE SYSTEM										112
	*	BRAKELIGHT SWITCH										—
	*	HEADLIGHT AIM										—
		CLUTCH SYSTEM										102
		SIDE STAND										129
	*	SUSPENSION										—
	*	NUTS, BOLTS, FASTENERS										—
	**	WHEELS/TIRES										—
**	STEERING HEAD BEARINGS										—	

\* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 206 ).

\*\*In the interest of safety, we recommend these items be serviced only by your dealer.