


Maintenance Component Locations

rear brake fluid reservoir
(VT750C ABS)

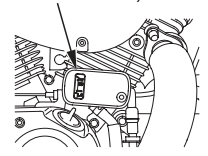

owner's manual
battery

main fuse
(VT750C)

fuse box
FI fuse
(VT750C)

spark plugs

air cleaner
crankcase breather tube

rear suspension
spring pre-load
adjuster

engine oil fill cap/dipstick

rear brake pedal

front brake caliper

