


Oil Recommendation

type	hypoid gear oil
viscosity (weight)	SAE 80

Checking & Adding Oil

Refer to *Safety Precautions* on page 58 .

LEFT REAR

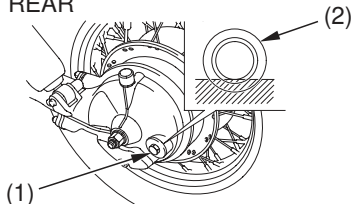

- (1) oil fill cap
(2) oil fill hole

1. Place the motorcycle on its side stand on a firm, level surface.
2. Hold the motorcycle in an upright position.
3. Remove the oil fill cap (1).
4. Check the oil level. It should be flush with the lower edge of the oil fill hole (2).
5. If the level is low, check for leaks. Add the recommended oil through the oil fill hole until it reaches the lower edge of the opening.
6. Install the oil fill cap and tighten to the specified torque:
9 lbf·ft (12 N·m , 1.2 kgf·m)