

Brakes

Brake Shoe Wear

(VT750C)


Refer to *Safety Precautions* on page 58 .

The rear brake is equipped with an external brake wear indicator that lets you check brake wear without disassembly.

Application of the brake pedal causes the arrow on the brake arm to move toward a reference mark on the brake panel.

1. Place your motorcycle on its side stand.
2. Apply the brake pedal and check the movement of the arrow (1) on the brake arm (2). Replace the brake shoes if the arrow aligns with the reference mark (3) on the brake panel (4) upon full application of the brake. If replacement is necessary, see your dealer.

RIGHT REAR

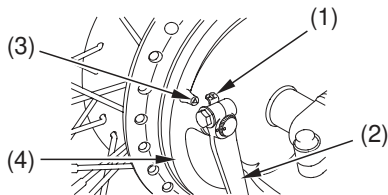

- | | |
|---------------|--------------------|
| (1) arrow | (3) reference mark |
| (2) brake arm | (4) brake panel |