


Battery

The battery is located in the battery box below the seat.


Removal

1. Make sure the ignition switch is OFF.
2. Remove the seat (page 76).
3. Remove the battery cover (1) by removing the screw (2).
4. Disconnect the negative (-) terminal lead (3) from the battery first.
5. Disconnect the positive (+) terminal lead (4).
6. Pull the battery (5) out of the battery box.

UNDER SEAT (VT750C)

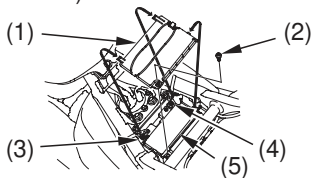

(VT750C ABS)

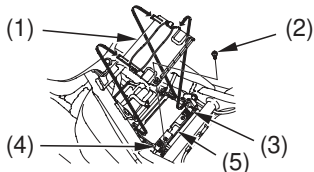

- (1) battery cover
(2) screw
(3) negative (-) terminal lead
(4) positive (+) terminal lead
(5) battery