

# If You Have a Flat Tire

## Emergency Front Wheel Removal/Installation

Refer to *Safety Precautions* on page 58 .


We recommend wheel removal be done only by your dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

### Removal

1. Park your motorcycle on a firm, level surface.
2. Raise the front wheel off the ground by placing a support block under the engine.

3. Loosen the right and left axle pinch bolts ( 1 ) and remove the front axle bolt ( 2 ).

### RIGHT FRONT

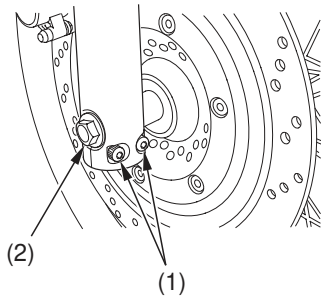

- (1) axle pinch bolts  
(2) front axle bolt