


# Indicators

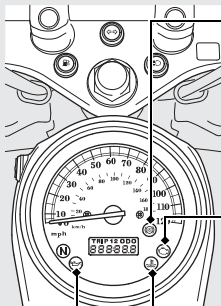


## **ABS (Anti-lock Brake System) indicator (VT750C ABS)**

Comes on when the ignition switch is turned on.  
Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:** ➔ P.79



## **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned on with the engine stop switch in the  (Run) position.

**If it comes on while engine is running:** ➔ P.78



## **High coolant temperature indicator**

**If it comes on while riding:** ➔ P.77



## **Low oil pressure indicator**

Comes on when the ignition switch is turned on.  
Goes off when the engine starts.

**If it comes on while engine is running:** ➔ P.78