









Maintenance Schedule

Items		Frequency	Odometer Reading*1							Refer to page	
			x 1,000 mi	0.6	4	8	12	16	20		24
			x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-related Items	Fuel Line					I		I		I	-
	Throttle Operation					I		I		I	72
	Air Cleaner*2						R			R	70
	Crankcase Breather*3				C	C	C	C	C	C	71
	Spark Plug				I	R	I	R	I	R	50
	Valve Clearance			I		I		I		I	-
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							52	
	Engine Oil Filter			R		R		R		R	54
	Radiator Coolant*4					I		I		R	56
	Cooling System					I		I		I	-
	Secondary Air Supply System					I		I		I	-
	Evaporative Emission Control System*5							I		I	-
	Final Drive Oil					I		I		R	68
Brake Fluid*4				I	I	R	I	I	R	58	

Maintenance Level

 : Intermediate. We recommend service by your Honda dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➔ P. 114).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.