


## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 40

### Fuse Box Fuses

(VT750C)

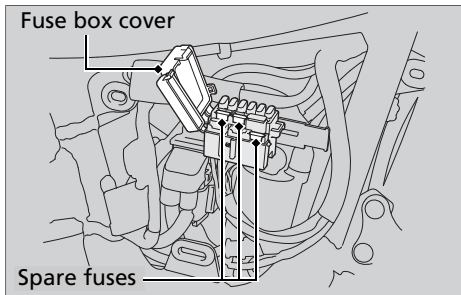

1. Remove the right side cover. ► P. 48
2. Open the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box cover.
5. Reinstall the right side cover.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.