

Side Cover


(VT750C)

The right side cover must be removed for the fuse maintenance.

The left side cover must be removed to access the storage compartment and check the color label.

(VT750C ABS)

The left side cover must be removed for the fuse maintenance and to access the storage compartment and check the color label.

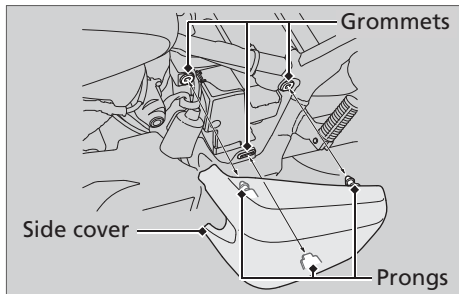

The right and left side covers can be removed in the same way.

Removal

1. Grasp the side cover.
2. Remove the prongs from the grommets.
3. Remove the side cover.

Installation

Install the parts in the reverse order of removal.