


## Checking the Clutch

### Checking the Clutch Lever Freeplay

Check the clutch lever freeplay.

**Freeplay at the clutch lever:**

3/8 to 13/16 in (10 to 20 mm)

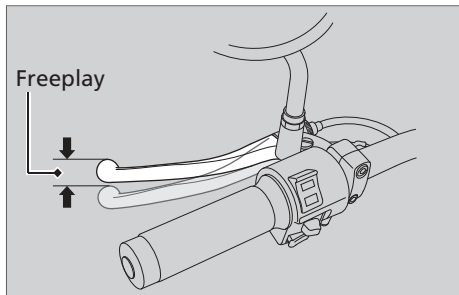

Check the clutch cable for kinks or signs of wear. If necessary have it replaced by your dealer.

Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.

**NOTICE**

Improper freeplay adjustment can cause premature clutch wear.