
3. Remove the exhaust pipe joint nuts.

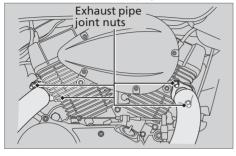

- 4. Remove the muffler bracket bolts and nuts, washers.
- **5.** Remove the mufflers.

