


### Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➤ P. 24
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is in  (Run) position ➤ P. 22
- Check for a blown fuse ➤ P. 95
- Check for a loose battery connection or battery terminal corrosion ➤ P. 40, 50
- Check the condition of the battery ➤ P. 91

If the problem continues, have your motorcycle inspected by your dealer.