

Installation

Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure that bolts and nuts are tight.

Tighten the battery cover screw.

Torque: 0.7 lbf·ft (1 N·m, 0.1 kgf·m)

Make sure the clock information is correct after the battery is reconnected. ➔ P. 19

For proper handling of the battery, see "Maintenance Fundamentals." ➔ P. 40
"Battery Goes Dead." ➔ P. 97