

### Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. To move the headlight case, loosen the bolts.

Tighten the bolts after adjustment.

Obey local laws and regulations.

