

11. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 18 lbf·ft (24 N·m, 2.4 kgf·m).

12. Fill the crankcase with the recommended oil (2 P. 54, P. 113) and install the oil fill cap/dipstick.

Required oil

When changing oil & cleaning the strainer screen:

1.0 US qt (0.9 liters)

When changing oil only:

0.8 US qt (0.8 liters)

13. Check the oil level. 2 P. 66
14. Check that there are no oil leaks.