

Troubleshooting

Engine Will Not Start	P. 82
Overheating (High coolant temperature indicator is on)	P. 83
Warning Indicators On	P. 84
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 84
Other Warning Indications	P. 85
Fuel Gauge Failure Indication.....	P. 85
Tire Puncture	P. 86
Electrical Trouble	P. 87
Battery Goes Dead	P. 87
Burned-out Light Bulb.....	P. 87
Blown Fuse	P. 90

Unstable Engine Operation Occurs Intermittently	P. 91
--	-------