


## Adjusting the Clutch Lever Freeplay

### Upper Adjustment

Attempt adjustment with the upper clutch cable adjuster first.

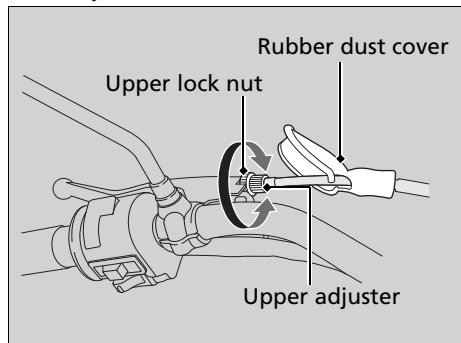

### Clutch ► Adjusting the Clutch Lever Freeplay

1. Pull back the rubber dust cover.
2. Loosen the upper lock nut.
3. Turn the upper adjuster until the freeplay is 10 to 20 mm (0.4 to 0.8 in).
4. Tighten the upper lock nut and check the freeplay again.
5. Install the rubber dust cover.