

Troubleshooting

Engine Will Not Start	P. 83
Tyre Puncture	P. 84
Electrical Trouble	P. 91
Battery Goes Dead	P. 91
Burned-out Light Bulb	P. 91
Blown Fuse	P. 95