


■ Rear Wheel

Removal

1. Place your motorcycle on its side stand on a firm, level surface.
2. Raise the rear wheel off the ground using a maintenance stand or a hoist.
3. Remove the rear brake adjusting nut.
4. Disconnect the brake rod from the brake arm.

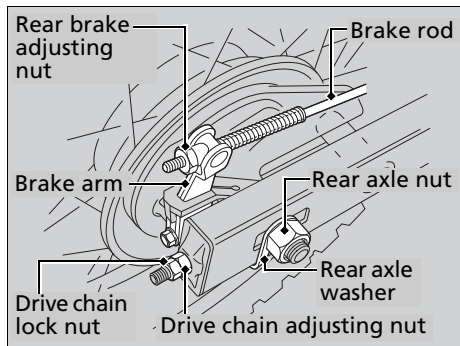

5. Loosen the drive chain lock nuts and drive chain adjusting nuts on both sides of the swingarm.
6. Remove the rear axle nut.
7. Remove the drive chain from the rear wheel sprocket by pushing the rear wheel forward.
8. Remove the rear axle shaft, rear axle washer, side collars and rear wheel from the swingarm.

