


High Air Temperature 35 °C (95 °F) or above:

- ① Do not use the choke.
- ② With the throttle slightly open (about 3 mm), press the start button.

About 3mm

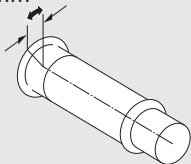

Low Air Temperature 10 °C (50 °F): or below

- ① Follow steps 1-5 under Normal Air Temperature.
- ② Warm up the engine by opening and closing the throttle slightly.
- ③ Continue warming up the engine until it runs smoothly and responds to the throttle when the choke lever is at fully OFF.

If the engine does not start:

- ① Press the engine stop switch to OFF.
- ② Push the choke lever forward all the way to fully OFF.
- ③ Open the throttle fully.
- ③ Press the start button for 5 seconds.
- ⑤ Wait 10 seconds, then press the engine stop switch to RUN.
- ⑥ Follow steps 1-2 under High Air Temperature.

If Engine Will Not Start ➔ P.81