


### I Starter Motor Operates But Engine Does Not Start

Check the following items:

- Make sure engine stop switch is RUN  position. [P. 20](#)
- Check the correct engine starting sequence. [P. 23](#)
- Check that there is gasoline in the fuel tank.

If the problem continues, have your motorcycle inspected by your dealer.

### I Starter Motor Does Not Operate

Check the following items:

- Check for a blown fuse. [P. 93](#)
- Check for a loose battery connection or battery terminal corrosion. [P. 52](#)
- Check the condition of the battery. [P. 90](#)

If the problem continues, have your motorcycle inspected by your dealer.