

Troubleshooting

Engine Will Not Start	P. 84
Tire Puncture	P. 85
Electrical Trouble	P. 91
Battery Goes Dead	P. 91
Burned-out Light Bulb.....	P. 91
Blown Fuse	P. 94