

- Do not push the brake pedal while the wheel is removed.


Installation

- To install the rear wheel, reverse the removal procedure.
 - Take care to prevent the brake caliper from scratching the wheel during installation.

NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

- Make sure that the lug on the brake caliper bracket is positioned in the slot on the swingarm.

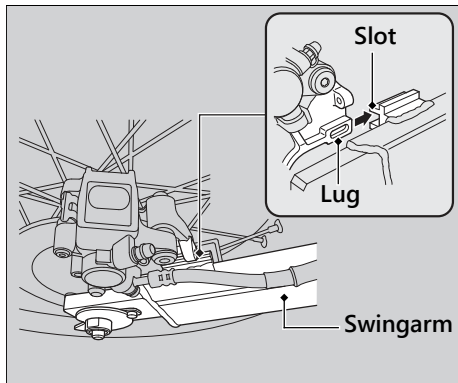

- Adjust the drive chain slack. ► P. 69
- Install and tighten the rear axle nut.

Torque: 65 lbf·ft (88 N·m, 9.0 kgf·m)

- Failure to provide adequate disc-to-caliper holder clearance may damage the brake discs and impair braking efficiency.