

Refueling *(Continued)*


Fuel fill cap removal and installation

50 STATE (meets California)

50 STATE versions of this motorcycle are equipped with an evaporative emission control system. ➔ **P.105**

For the system to function properly, observe the following when removing and installing the fuel fill cap.

- 1 To open the fuel fill cap, turn the cap counterclockwise.
 - ▶ Do not disconnect the breather tube.

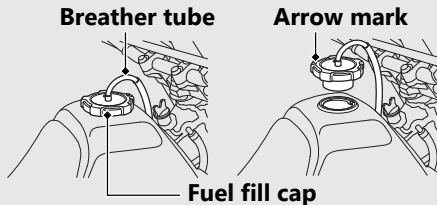

- 2 To close the cap, align the tabs of the fuel fill cap to the slots of the filler neck with the arrow mark on the cap towards the rear of the motorcycle.
- 3 Turn the cap clockwise until the arrow mark points towards the front.
 - ▶ Make sure that the breather tube is not twisted or blocked when the cap is secure in place.

NOTICE

If you replace the fuel fill cap, use only a Honda Genuine replacement parts or its equivalent. Failure to use the proper part could cause serious fuel system problem.