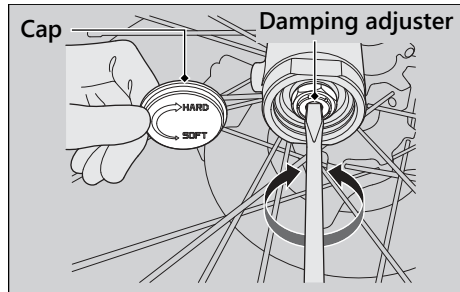
**NOTICE**

Do not exceed maximum air pressure.  
Adjust both left and right forks to the same air pressure.

**Compression Damping**

You can adjust the compression damping by the adjuster to suit the load or the road surface. The compression damping adjuster has at least 14 positions (clicks). Turning the adjuster screw one full turn advances the adjuster 4 positions.

Turn clockwise to increase compression damping (hard), or turn counterclockwise to decrease compression damping (soft). The standard position is approximately 2 clicks from the maximum setting.

**NOTICE**

Do not turn the adjuster beyond its limits.  
Adjust both left and right forks to the same compression damping.