


Battery

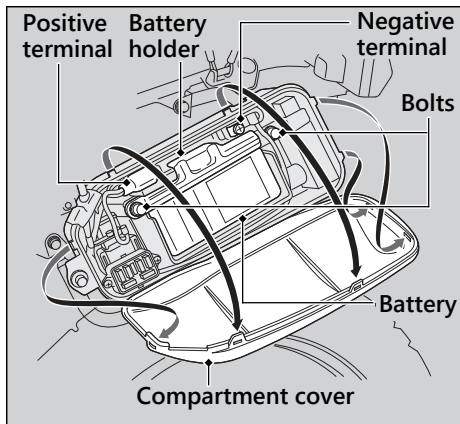

Removal

Make sure the ignition switch is in the OFF position.

1. Remove the left side cover. ➤ P. 53
2. Open the battery compartment cover.

3. Remove the bolts and remove the battery holder.
4. Disconnect the negative \ominus terminal from the battery.
5. Disconnect the positive \oplus terminal from the battery.
6. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive \oplus terminal first. Make sure that bolts and nuts are tight.

For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 41
"Battery Goes Dead." ➤ P. 92